


Absolute Security

Because eye can't
be everywhere



INFANT SECURITY SYSTEMS
DIVISION OF INNOVATIVE CONTROL SYSTEMS INC.

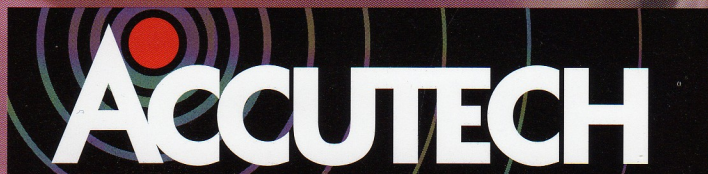

INFANT SECURITY SYSTEMS
DIVISION OF INNOVATIVE CONTROL SYSTEMS INC.

Infant security has unfortunately become an increasing issue of concern for both hospitals and parents. Over the last two decades, there have been over 225 infant abductions, of which half have been from hospitals. The incident locations range from the mother's room and general hospital premises to the nursery and pediatrics. Clearly, security and staff cannot provide the adequate, watchful eye alone.

Accutech, a division of Innovative Control Systems, Inc. founded in 1985, was one of the first companies to offer healthcare security systems. Since then we have evolved at the pace of technology, always on the cutting edge of innovation, offering the next generation in infant protection. Accutech systems offer superior benefits with customized, modular designed functions that are upgradable and expandable.

Before you make a decision on infant security, you owe it to yourself and your facility to examine the Accutech systems.

ES 2200 - Exit Seeker System

Perimeter protection with a simple straight forward design without a computer

IS 3200 - Intelligent System

Computer enhanced system with patient identification, logging of data and history

BR 4200 - Band Removal System

Complete floor coverage with true tamper-proof protection far beyond just cut band notification

Report Generator: Accutech - [Accutech Health Center]


ACCUTECH ALARM JOURNAL

Accutech - [Accutech Health Center]
Created On: [06/03/04]
Period Covered: [06/02/04] through [06/03/04]

Date of Alarm	Occurred in Zone	Patient Information	Alarm Type
06/03/04 11:39:59	RM 1001 - RM 1010	Smith, Michelle; 1009; Tag# 44	Loiter
06/03/04 11:39:46	RM 1001 - RM 1010	Smith, Michelle; 1009; Tag# 44	Battery Low
06/03/04 11:39:06	East Stairwell Exit		Door Ajar
06/03/04 11:37:54	West Stairwell Exit	Smith, Juliette; 1003; Tag# 88	Door Alarm
06/03/04 11:37:52	West Stairwell Exit	Smith, Juliette; 1003; Tag# 88	Loiter
06/03/04 11:37:12	North Hallway		Door Ajar
06/03/04 11:36:37	West Hallway	Johnson, Daniel; 1021; Tag# 10	Band Removal
06/03/04 11:36:37	West Hallway	Johnson, Daniel; 1021; Tag# 10	Loiter
		Johnson, Daniel; 1021; Tag# 10	

Report Type: Alarm Journal
Search for: Zone: Any, Patient: Any
List by: Date, Descending
Buttons: Run Report, Print Report, Save Report, Done

Screen shot of Accutech's Software Alarm Journal

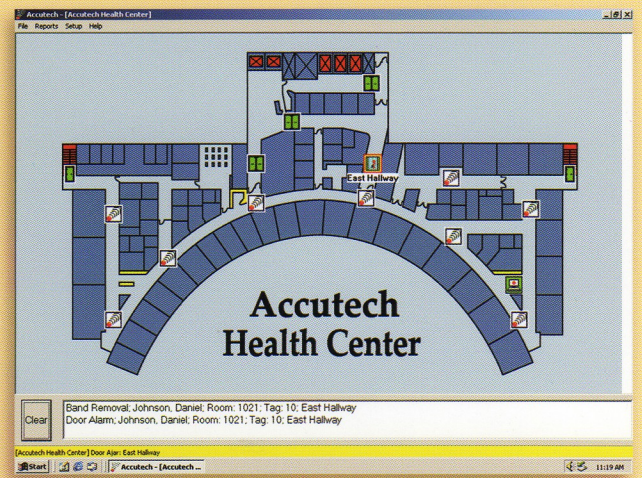


Example of Accutech's Floor Plan Software



Available tags and band for ES and IS Systems

Tag and band for BR System

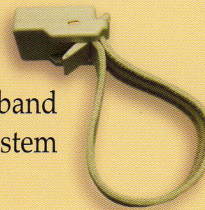

Portable Tag Activator/Deactivator



Staff Alert Panel for ES and IS Systems



Accutech systems are quality built for long lasting durability

Product Level Features

ES 2200

IS 3200

BR 4200

Intelli-Band Technology

Tamper-Proof System			•
Soft Polyester Blend Elastic Band			•
Full Circumference Contact with Skin			•
Band Removal Notification			•
Band Compromise Notification			•

Computer Enhanced System

Windows Based Software with Password Protection		•	•
Quick Patient Assignment		•	•
Easy Report Generation		•	•
Alarm Information with Complete History of Activity		•	•
Low Battery Notification		•	•
Monitor Multiple Floors		•	•
Unique Transfer Feature		•	•
Tag Supervision		•	•

All Systems Feature

No Enrollment Needed for Instant Perimeter Protection	•	•	•
Modular Design Allows Easy, Affordable Upgrades	•	•	•
Hardware Driven	•	•	•
Wired to Back-up Power	•	•	•
418 MHz Frequency	•	•	•
Utilizes Filtered Data to Avoid Noise	•	•	•
Reusable, Water Resistant Tag	•	•	•
Portable Handheld TAD Units that Control Tag Functions	•	•	•
Supervisor, Loiter and Door Ajar Notifications	•	•	•
Double Conditioning Door Alarm Notification	•	•	•
Fire Panel Interfacing with NFPA Magnetic Door Locks	•	•	•
Escort Feature	•	•	•
Simple Operation	•	•	•
One-year Warranty	•	•	•
Free Onsite Training	•	•	•



INFANT SECURITY SYSTEMS
DIVISION OF INNOVATIVE CONTROL SYSTEMS INC.

Competitive Advantages

INNOVATION... NOT IMITATION (it's in our name)

Our commitment to designing a completely new system has addressed the inadequacies of other security systems to date.

NO ADDITIONAL SPACE REQUIRED... ZERO FOOTPRINT

Our computers require no countertop space thanks to flat screen monitors that can be wall mounted and keyboards with built-in CPUs.

STAFF... USER FRIENDLY

Intimidating technology defeats the purpose. Security should be second nature, almost routine and as easy as changing a diaper. Accutech's simple design is easy to use, which insures staff compliance.

PREFERRED... BY BABIES AND PARENTS ALIKE

Our band, *not the tag*, comes in contact with infant's sensitive skin.

WHEN IT'S ON... IT'S COMFORTABLE

The Accutech BR 4200 System Bands are made of soft, stretchable fabric that comfortably moves with the baby, and even snugs up during the first 48 hours of infant weight loss. More importantly, this system monitors the security of the infant, not just the tag.

WHEN IT'S OFF... IT'S ALARMING

The Accutech Intelli-Band Technology will alert you immediately if the bracelet accidentally comes off or is intentionally removed by an unauthorized person. Most competitive systems will only alert you if the band is cut off.

IF YOUR PC GOES DOWN... SECURITY DOESN'T

Our software enhances the system, rather than controls it. Unlike competitors' software-driven security systems, if your PC goes down, the Accutech system still maintains perimeter security. Accutech systems are supported by Security Departments, not IT Departments.

EVERYTHING YOU WANTED TO KNOW... AND MORE

Each Accutech system ships with a Start-up Kit that contains everything you will need to utilize and maintain your system for years to come.

PERFORMANCE TESTED... CERTIFIED

All Accutech systems meet FCC, NFPA and NEC requirements. In addition, the Accutech system is UL 294 Listed. (Rigorously tested for fire, shock and performance)

TECHNICAL SUPPORT... 24/7

When questions arise, you will be glad to know that you have unlimited technical support 24/7 that is backed up by a network of over 5,000 Service Technicians.

Additional Benefits

Free Software Updates

One-time Software License Fee

Government, GPO and Corporate Pricing

Bulk Pricing on Disposables

Extended Warranty - Up to 4 Years Protection

Preventative Maintenance and Re-certifications

Financing and Leasing Options

System Upgrade Incentives

Interface into Existing Card Access Systems,
Locks, Pagers, CCTVs and Elevator Deactivation

Pediatrics, Adults and Assets can be Utilized
Under One System



Security Systems Made for Life

Innovative Control Systems, Inc.
N27 W23910-A Paul Road
Pewaukee, WI 53072

800.356.2671

www.accutech-ics.com

FAX 262.347.0655



LISTED
UL Listed 294
Access Control
(BP9480)